

## Bandes de fréquence

Sous-bande	Fréq(GHz)	Long. d'onde(cm)	Sous-bande	Fréq(GHz)	Long. d'onde(cm)
	<b>Bande P</b>			<b>Bande X<sub>(suite)</sub></b>	
	0.225	133.3	d	6.25	4.8
	0.390	76.9	b	6.90	4.35
			r	7.00	4.29
	<b>Bande L</b>		c	8.50	3.53
	0.390	76.9	b	6.90	4.35
p	0.465	64.5	s	9.60	3.13
c	0.510	58.8	x	10.00	3.00
l	0.725	41.4	f	10.25	2.93
y	0.780	38.4	k	10.90	2.75
t	0.900	33.3			
s	0.950	31.6		<b>Bande K</b>	
x	1.150	26.1		10.90	2.75
k	1.350	22.2	p	12.25	2.45
f	1.450	20.7	s	13.25	2.26
z	1.550	19.3	e	14.25	2.10
			c	15.35	1.95
	<b>Bande S</b>		u	17.25	1.74
	1.55	19.3	t	20.50	1.46
e	1.65	18.3	q	24.50	1.22
f	1.85	16.2	r	26.50	1.13
t	2.00	15.0	m	28.50	1.05
c	2.40	12.5	n	30.70	0.977
q	2.60	11.5	l	33.00	0.909
y	2.70	11.1	a	36.00	0.834
g	2.90	10.3			
s	3.10	9.67		<b>Bande Q</b>	
a	3.40	8.32		36.0	0.834
w	3.70	8.10	a	38.0	0.790
h	3.90	7.69	b	40.0	0.750
z	4.20	7.14	c	42.0	0.715
d	5.20	5.77	d	44.0	0.682
			e	46.0	0.652
	<b>Bande X</b>			<b>Bande V</b>	
	5.20	5.77		46.0	0.652
a	5.50	5.45	a	48.0	0.625
q	5.75	5.22	b	50.0	0.600
y	6.20	4.84	c	52.0	0.577
			d	54.0	0.556
	<b>Bande W</b>		e	56.0	0.536
	56.0	0.536			
	100.0	0.300			